

EP G2

Control System and Menus

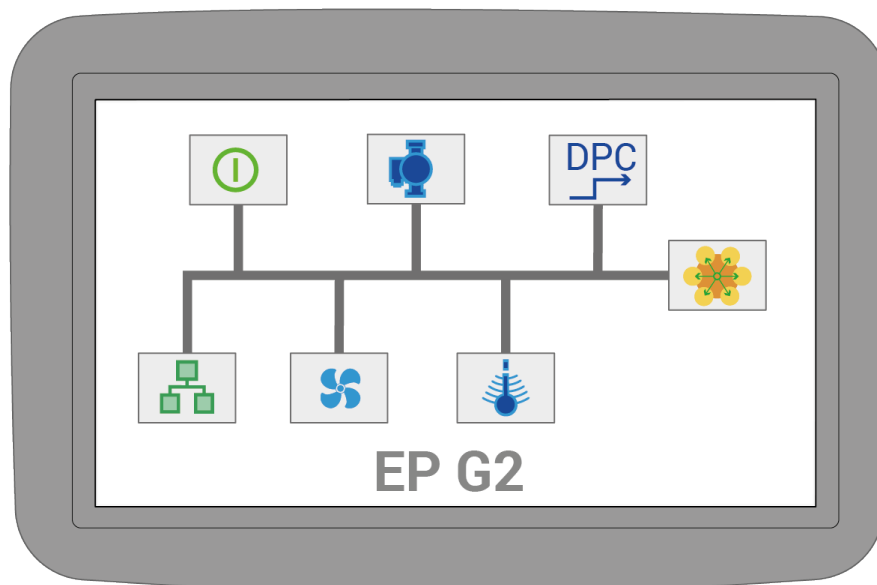



Table of Contents


A.1.1 EP G2 - Control System and Menus.....	3
A.2.1 System Update	3
A.3.1 Main page	4
A.4.1 Menu System	4
A.5.1 Event log.....	5
A.6.1 Quick Start.....	6
A.6.2 Standard.....	6
A.6.3 External Power Limiting, 0-10V	6
A.6.4 External Set point source, 0-10V	6
A.6.5 UTK.....	6
A.6.6 DPC via external 0-10V signal.	7
A.7.1 Warnings and Alerts	8
A.8.1 Status Icons	9
B.9.1 Regulation.....	10
B.9.2 Overtemp limit	11
B.9.3 Standard.....	11
B.9.4 Direct Power Control.....	12
B.9.5 UTK.....	13
B.10.1 Installation	14
B.10.2 Fan and Pump.....	15
B.10.3 Load Limiter	16
B.10.4 Analog Input P20	17
B.10.5 Analog Input P21	18
B.10.6 Analog Output P18	19
B.10.7 Analog Output P19	20
B.10.8 Simulator.....	20
B.11.1 Energy and Current.....	21
B.11.2 Power Groups	21
B.11.3 Busbar 1	22
B.11.4 Busbar 2	23
B.11.5 Busbar 3.....	24
B.11.6 Busbar 4.....	25
B.12.1 User Interface	26
B.13.1 Communication.....	27
B.13.2 Reporting/Logging	28
B.13.3 Modbus.....	29
B.13.4 BACNet.....	30
B.14.1 Boiler info	30
B.14.2 Temperature sensors.....	31
B.14.3 Safety Interlocks	32
B.14.4 Other signals	32
B.14.5 Software Versions	33
B.14.6 Load Monitor	33
B.15.1 Administration	34
B.15.2 Software Updates	35
B.15.3 USB/Backup.....	35


EP G2 - Control System and Menus


This manual describes the function of the control system and configuration options.

For technical data and electrical connections, please refer to technical manual "Use and Installation".

 This manual describes a generic EPG2 boiler. The availability of some sections depend on the configured options. For example, the number of busbars differs between small and large boilers. Also, default values, minimum and maximum etc. depend on the model. However, the correct values can be read directly on the boiler.

 This manual, **EP G2 [tr: print_front_subheader]**, is updated to match new software releases. The latest version can be downloaded from Värmebaronen AB.


 By default, temperature regulation is off. Before commissioning, the boiler must be configured and a regulation mode selected. Some of the most common use cases are outlined in section **Quick Start**


 It is recommended to logging to Värmebaronen AB is enabled. In addition to providing valuable data for future improvements and aid in troubleshooting it also enables the boiler to send alerts via email to operators etc.

System Update

The boiler's system software can be updated by an installer. This makes it possible to get new features and to apply bugfixes.


The updates can be downloaded from <https://telemetry.varmebaronen.se>: 2002 and put on a USB-stick. The download page also contains a changelog, outlining the most important changes between versions.

If the boiler has a working internet connection the alert  **New Software available** will be shown when a new version is available.

To install an update, activate installer mode, and go to  -> **Administration** -> **Software Updates**. For more info see section avsnittet **Software Updates**

Alternatively, the system can be updated through the recovery mode that can be reached during boot.


Main page

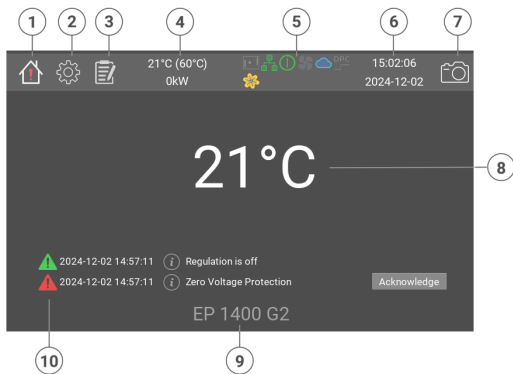

1. Main page
2. Settings
3. Event log
4. Boiler temperature, Temperature Set Point and current power
5. Status icons
6. Time and date
7. Save screenshot
8. Current boiler temperature
9. Boiler model
10. Alerts and warnings

The main page shows current boiler temperature.

Any alarms and information alerts are shown below the temperature. When more than five alerts are active the temperature is hidden.

 The main page can be reached by pressing the house icon at the top left of the screen.

Menu System




1. Menu tree
2. A label is a read only object that can show a text or number
3. Number field. Can be integer or decimal value. Use plus and minus to increment or decrement. Clicking on the value itself brings up a virtual keyboard.
4. A number field that is disabled
5. A drop down list
6. A button runs a function immediately. Sometimes a window will popup for confirmation
7. A boolean value is toggled on or off by pressing it. This one is on
8. This boolean is off
9. A slider adjusts a numeric value
10. Small booleans are used to indicate the state of an input
11. A text string, can be a name, email address, internet URI etc.
12. The revert button cancels all unsaved changes on the page
13. The save button stores changes in the configuration
14. The help button brings up a longer help text about the current page
15. Most items have an 'i'. Pressing it will bring up a screen with more information such as default value, min and max, modbus index etc.

Most changes only take effect when the save button has been pressed. Pressing Revert or navigating away from the page reverts any unsaved changes.

 Please note that some minimum and

maximum values shown differ between models. The values for the current boiler can always be read on the display.

Event log

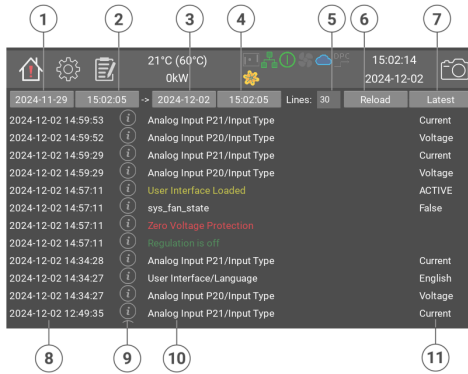

1. Start date
2. Start time
3. End date
4. End time
5. Number of rows to show
6. Reload events from date
7. Show latest events

8. Time and date when the event occurred
9. Press for detailed information
10. Name of the event
11. Value or status

The event log function is used to view alerts and parameter changes.

Alerts are shown in their normal colors, red, yellow and green.


Parameter changes are shown in white. Some events have an 'i' that will bring up a window with more information when pressed.

Do the following to load events.





1. Choose start date and time
2. Choose end date and time
3. Enter maximum number of rows to show
4. Press Reload
5. In a few seconds the events will be listed

Quick Start






The following sections contains the minimum steps to get the boiler started. All configuration is done in installer mode.

 The boiler comes from the factory with regulation turned off.






Standard

1. Switch to Installer
 -> **Administration**
- Press: **Switch to Installer.**
2.  -> **Regulation**
- **Set Point Source = Internal**
- **Boiler Set Value, internal (°C) =**
Desired boiler temperature
- Save
3.  -> **Installation**
- **Mode = Standard**
- Save
4.  -> **Communication -> Reporting/Logging**
- **Send logs to Värmebaronen,**
check the box
- Save






External Power Limiting, 0-10V

1. Switch to Installer
 -> **Administration.**
- Press: **Switch to Installer.**
2.  -> **Regulation**
Set Point Source = Internal
- **Boiler Set Value, internal (°C) =**
Desired boiler temperature
- **External Power Limiting = Upper Limit**
- **Input Source = P20**
- Save
3.  -> **Installation -> Analog Input P20**
- **Input Type = Voltage.**
- Save
4.  -> **Installation**
- **Mode = Standard**
- Save
5.  -> **Communication -> Reporting/Logging**
- **Send logs to Värmebaronen,**
check the box
- Save

External Set point source, 0-10V

1. Switch to Installer
 -> **Administration.**
- Press: **Switch to Installer.**
2.  -> **Regulation**
- **Set Point Source = P20**
- **Min. Set Temp (°C) =**
Temperature at 0% input signal
- **Max. Set Temp (°C) =**
Temperature at 100% input signal
3.  -> **Installation -> Analog Input P20**
- **Input Type = Voltage.**
- Save
4.  -> **Installation**
- **Mode = Standard**
- Save
5.  -> **Communication -> Reporting/Logging**
- **Send logs to Värmebaronen,**
check the box
- Save

UTK

1. Switch to Installer:
 -> **Administration.**
- **tr: press: Switch to Installer.**
2.  -> **Regulation**
- **Set Point Source = UTK**
- Save
3.  -> **Regulation -> UTK**
- Temperature nodes: Set the desired boiler temperature at the 11 different points corresponding to the outside temperature between -30°C to +20°C.
- Save
4.  -> **Installation**
- **Mode = Standard**
- Save
5.  -> **Communication -> Reporting/Logging**
- **Send logs to Värmebaronen,**
check the box
- Save

DPC via external 0-10V signal.

1. Switch to Installer:

⚙️ -> **Administration.**

- Press: **Switch to Installer.**

2. ⚙️ -> **Regulation-> Direct Power Control**

- **Signal Source** = Analog Input P20

If desired, the size of the power jump can be limited and the time between the power jumps changed for both increasing and decreasing power.

- Save

3. ⚙️ -> **Regulation-> overtemp**

- **Overtemp mode** = Absolute.

- **Absolute Limit (°C)** =

Temperature at which the boiler turns off power

- Save

4. ⚙️ -> **Installation -> Analog Input P20**

- **Input Type** = Voltage.

- Save

5. ⚙️ -> **Installation, Mode = Direct Power Control**

- Save

6. ⚙️ -> **Communication -> Reporting/Logging**

- **Send logs to Värmebaronen**, check the box

- Save

Warnings and Alerts

Warnings and Alerts are indicated in two places: On the main page and on the home icon. There are three levels:

- ▲ Green messages indicate that something important is activated or missing. For example regulation is turned off, or simulator is enabled.
- ▲ Yellow warnings stop regulation until the issue has been resolved. The boiler automatically resumes regulation when the cause is gone, but the message stays until the user acknowledges it.
- ▲ Red alarms stop the boiler and activate the alarm relay output, P9. The boiler resumes regulation when the error has been resolved and acknowledged.

All warnings and alerts are logged in the event log.

The following alarms can occur:

- ▲ **Simulator Active**
Simulator is active and normal regulation is off.
To change setting: activate installation mode and go to **Installation**. Set **Boiler Simulator** to **Boiler On, Simulator Off**.
- ▲ **Load Limiter Active**
The Load Limiter restricts the boiler's power. For more information and settings, please refer to menu ⚙️ -> **Installation** -> **Load Limiter**
- ▲ **External Power Limit Active**
An external source limits the boiler's output. For more information, please refer to menu **Installation**.
- ▲ **Regulation is off**
The boiler is delivered with the regulation switched off.
To change the setting: activate the installer mode, go to **Installation** and **Mode**.
- ▲ **Update current boards**
One or more current meter boards can be updated.
Go to **Energy and Current** ->

busbar_n and press **program_rog_button_text**.

- ▲ **New Software available**
A new version of the software is available.
Go to ⚙️ -> **Administration** -> [Software Updates to download and install.
- ▲ **Check main breakers' torque**
It is time to check the torque on the mains breaker cable clamps.
For further instructions see the sticker on the inside of the boiler door and please refer to technical manual "Use and Installation".
- ▲ **Low Water Level**
Low water level in the boiler tank. Check the reason, vent and top up with water if necessary.
▲ On boilers from 900kW and up this will also trigger the alarm output.
For more info, please refer to technical manual "Use and Installation".
- ▲ **Overtemperature**
The overtemperature protection has been activated due to the boiler temperature reaching the set limit. All power is temporarily disconnected. When the boiler temperature has dropped with set hysteresis, regulation will resume automatically. For more information and settings please refer to menu ⚙️ -> **Regulation** -> **overtemp**
- ▲ **Boiler Temp. Sensor Missing**
Not connected, or interrupted boiler temperature sensor.
For more information and troubleshooting, please refer to technical manual "Use and Installation".
- ▲ **PCB Temperature High**
The temperature of the PCB is too high. Regulation is temporarily stopped and resumed when the temperature has dropped.
- ▲ **Boiler Temperature low**
The boiler temperature is lower than +5°C. Regulation resumes automatically when the boiler temperature exceeds +15°C.

Alternatively short circuit in the boiler temperature sensor. For more information and troubleshooting, please refer to technical manual "Use and Installation".

⚠ No UTK sensor connected

Outdoor sensor is missing or incorrect. For more information and troubleshooting, please refer to technical manual "Use and Installation".

⚠ Forced Power Stage

None

⚠ Overtemperature

The temperature guard has triggered. Reset can take place when the boiler temperature has dropped by approx. 25 degrees. For more information, please refer to technical manual "Use and Installation".

⚠ Pressure High

The high pressure guard has triggered. For reset and more information, please refer to technical manual "Use and Installation".

⚠ Load switch Off

Load switch in Off or Tripped position. Press Pause to be able to reset the switch to operating position (On). ATTENTION! All red alerts must be rectified and acknowledged before the load switch can be reset. For more information, please refer to technical manual "Use and Installation".

⚠ Pressure Low

The low pressure guard has triggered. For reset and more information, please refer to technical manual "Use and Installation".

⚠ Zero Voltage Protection

After a power cut, the boiler must not restart automatically. Acknowledgment must be done

manually. For more information, please refer to menu **Installation** - > **Enable Soft Zero Voltage Protection**.

Status Icons

A Grey icon means that the function is available but currently not active.

 **BACnet**

BACnet is enabled

 **Log to cloud**

Send logs to Värmebaronen

 **DPC - Direct Power Control**

DPC is enabled or active

 **Fan enabled**

The fan is enabled and running

 **Modbus enabled**

Modbus communication is enabled

 **Ethernet**

Ethernet connection status

 **Pump enabled**

Shows pump relay status

 **Screensharing**

Indicates that screensharing is active

 **Simulator**

Indicates that the boiler simulator is active

 **SSL Certificates Missing**

SSL Certificates used to secure communication with Värmebaronen AB's servers are missing. Please contact Värmebaronen's service department to resolve.

 **USB Memory Drive**

A USB memory drive is inserted


 **User level**

I - Installer
S - Service/admin
P - Production

 **UTK**

Outdoor temperature compensation mode selected


Regulation

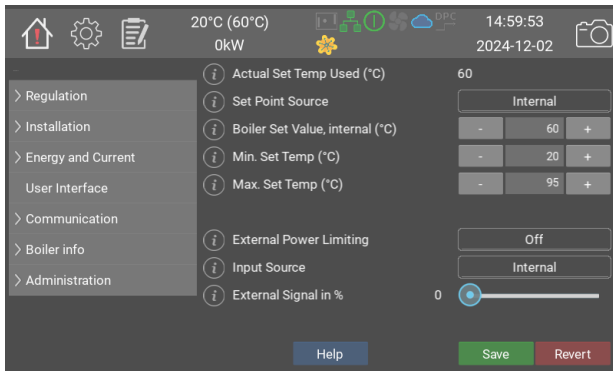

Please note that Min-, Max- and standard values may vary depending on the boiler model and any accessories. Current values can always be read out directly on the boiler.

	Range/ Options	Default	Modbus ID
Actual Set Temp Used (°C) This is the value the boiler will actually use as set point. It is read from the selected Set Point Source below.	20 - 200 (1)		40102
Set Point Source Select the set point source. Internal uses the value below. Also select this for control via modbus/BACnet P20 and P21 are analog inputs. Select input type under Installation. UTK uses the optional outdoor sensor (accessory) together with an adjustable offset curve. For more information and settings, please refer to Regulation -> UTK .	0: Internal 1: UTK 2: P20 3: P21	0: Internal	40101
Boiler Set Value, internal (°C) Set point to use when Internal mode is enabled	20 - 95 (1)	60	40103
Min. Set Temp (°C) Minimum value that can be selected above. This is also corresponds to an analog input of 0%	10 - 95 (1)	20	40104
Max. Set Temp (°C) Maximum value that can be selected above. This is also corresponds to an analog input of 100%	10 - 95 (1)	95	40105
External Power Limiting Off disables external power limiting. Upper Limit sets an upper limit that is used at next evaluation cycle (see the regulation method settings for timings). Please note that using external power limiting in combination with DPC can cause unexpected results and is not recommended.	0: Off 1: Upper Limit	0: Off	40111
Input Source Select the external limit source. Internal is for Modbus/BACnet and testing. P20 and P21 uses the analog inputs. P32, Exp. Board is three bit binary control from the expansion board, called EP-VP G2. Primarily used together with NIBE's heat pumps.	0: Internal 1: P20 2: P21 3: P32, Exp. Board	0: Internal	40112
External Signal in % The actual power limit level in %	0 - 100 (1)	0	40113


Overtemp limit

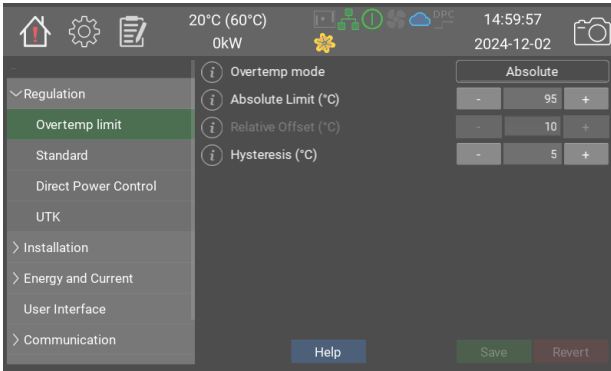

The boiler's overtemperature protection should be set to trip a few degrees below the external overheating protection. When the overtemperature protection is activated, the contactors are shut off and a yellow warning shows. Normal regulation resumes when the boiler temperature has fallen below "Hysteresis (°C)" hysteresis. Current limit value can be set to an absolute value or a relative value that follows Actual Setpoint Used, up and down.

	Range/Options	Default	Modbus ID
Overtemp mode The Overtemp limit can be set as Absolute Limit or Relative to Set Temp.	0: Absolute 1: Relative to Set Temp	0: Absolute	40121
Absolute Limit (°C) The overtemp protection is triggered at this temperature.	0 - 105 (1)	95	40122
Relative Offset (°C) Adds selected number of degrees (°C) to "Boiler Set Value" which is the Overtemp limit.	0 - 30 (1)	10	40123
Hysteresis (°C) When the boiler temperature has decreased by the set number of degrees (°C) below the Overtemp limit normal regulation resumes.	1 - 10 (1)	5	40124

Standard

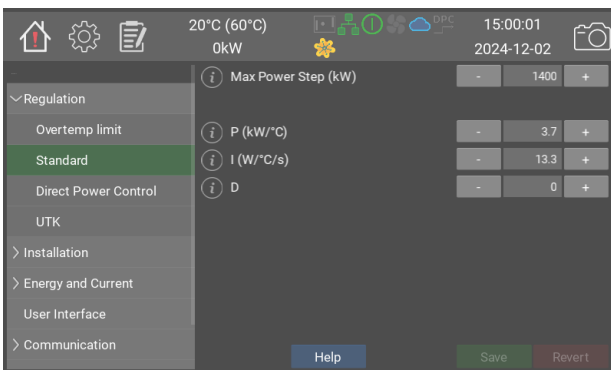


In standard mode, the goal is to keep the boiler temperature as close to the setpoint as possible. The boiler regulates best if it is allowed to jump freely between available steps, but it is possible to limit the jump size if the installation requires it.

P, I and D values are factory set for each boiler size and may therefore differ from the values in the manual.

	Range/Options	Default	Modbus ID
Max Power Step (kW) Maximum permissible power step. For more information about power/stage, please see the boiler's manual .	0 - 1400 (1)	1400	40141
P (kW/°C)	0.0 - 20.0 (0.1)	3.7	40142 F
I (W/°C/s)	0.0 - 100.0 (0.1)	13.3	40143 F
D	0 - 1000 (1)	0	40144

Direct Power Control

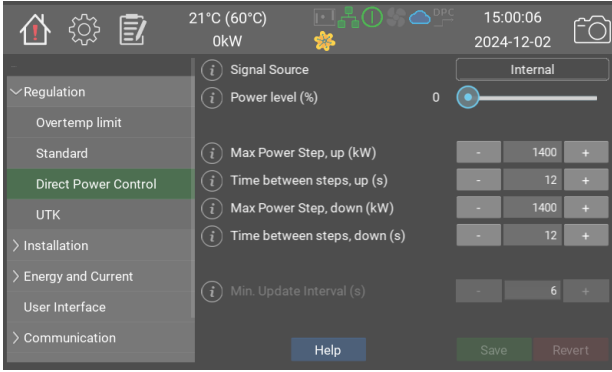

DPC enables direct power control from a superior control system. In this mode, the internal temperature control is switched off. Overheating protection, maximum installed power and any external power limitation apply.

The following signal sources can be used:

- Internal. The desired value can be set directly on the display or via modbus/ BACnet. This is the fastest control method, with typical delays less than 0.2s.
- P20/P21. Control signal is taken from one of the analog inputs. These are configured separately.

When analog input is selected, the external control signal is run through a filter that does not pass the signal on until it has been stable at the same level for a certain time, normally 0.1s. The control signal also goes through a hysteresis filter that switches only when the signal has reached 2/3 to the next step.

To avoid overheating in the contactors, the minimum time interval between switching is normally 6s.

i If at least 6s has elapsed since the last change the boiler doesn't have to wait before changing power next time. Other intervals are available on request.

In some cases, it may be desirable to have a smooth ramp-up in steps. This is done by setting the maximum power jump up and down to less than the installed boiler power, as well as specifying a time interval for the change.

Since DPC mode doesn't use the temperature set point value, **Overtemp mode** must be set to **Absolute**. This is done automatically when enabling DPC mode.

	Range/ Options	Default	Modbus ID
Signal Source Signal source for controlling the DPC power level. Select internal when using modbus and BACNet. If using P20/P21 these also need to be configured on their installation page.	0: Internal 1: Analog Input P20 2: Analog Input P21	0: Internal	
Power level (%)	0 - 100 (1)	0	40132
Max Power Step, up (kW) This limits the instantaneous change to a set level	0 - 1400 (1)	1400	40133
Time between steps, up (s) This is the minimum time between steps when the boiler increases power.	6 - 900 (1)	12	40134
Max Power Step, down (kW) This limits the instantaneous change to a set level	0 - 1400 (1)	1400	40135
Time between steps, down (s) This is the minimum time between steps when the boiler decreases power.	6 - 900 (1)	12	40136
Min. Update Interval (s)	1 - 900 (1)	6	

UTK




UTK mode allows the set point value to be adjusted in relation to the outside temperature.

A UTK-sensor must be connected to P13 in order for this function to work.

To enable, select **UTK** as **Set Point Source** in the main regulation settings.

	Range/ Options	Default	Modbus ID
Curve Offset (°C) This moves all the points up or down by the value entered	-10 - 10 (1)	0	40162 S
Temperature Nodes (°C)			
-30 Set point value at -30°C outdoors.	20 - 80 (1)	63	40151
-25 Set point value at -25°C outdoors.	20 - 80 (1)	62	40152
-20 Set point value at -20°C outdoors.	20 - 80 (1)	60	40153
-15 Set point value at -15°C outdoors.	20 - 80 (1)	57	40154
-10 Set point value at -10°C outdoors.	20 - 80 (1)	53	40155
-5 Set point value at -5°C outdoors.	20 - 80 (1)	49	40156
0 Set point value at 0°C outdoors.	20 - 80 (1)	45	40157
5 Set point value at +5°C outdoors.	20 - 80 (1)	40	40158
10 Set point value at +10°C outdoors.	20 - 80 (1)	33	40159
15 Set point value at +15°C outdoors.	20 - 80 (1)	27	40160
20 Set point value at +20°C outdoors.	20 - 80 (1)	20	40161


Installation

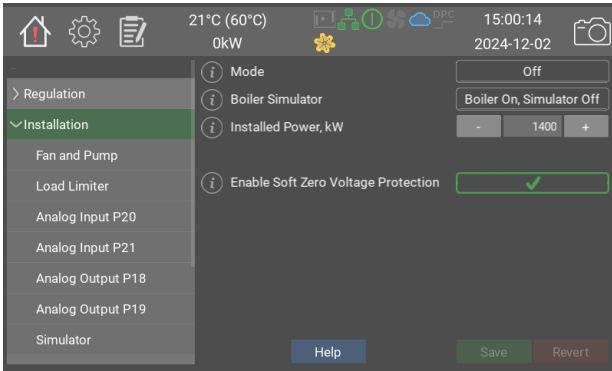

Installation

	Range/ Options	Default	Modbus ID
Mode Select boiler control mode. Off disables all temperature control. Standard is the default, predictive temperature control method. Direct Power Control , Direct Power Control, lets an external control system regulate the power. Available options depends on ordered configuration.	0: Off 1: Standard 2: Direct Power Control	0: Off	40201
Boiler Simulator Turn on or off the internal boiler simulator. The simulator can be used fo demoing and is useful for testing input and output signals before deploying the boiler.	0: Boiler Off, Simulator On 1: Boiler On, Simulator Off	1: Boiler On, Simulator Off	40202
Installed Power, kW Limit the boiler to a lower power. The selected level will be considered as 100%	0.0 - 1400.0 (46.6)	1400	40203 F
Enable Soft Zero Voltage Protection With this enabled the boiler won't automatically restart the regulator after a power outage or reboot. The alert can only be acknowledged by physically being present at the boiler. For more information, please refer to technical manual "Use and Installation".	0/1	0	

Fan and Pump

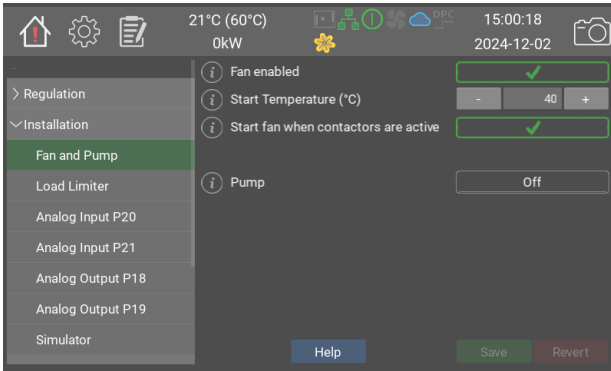

See technical data for the current boiler model for more information.

It is recommended to enable the fan and also enable **Start fan when contactors are active**


The boiler can control an external circulation pump. See the help section for the pump for options.

For more information, please refer to technical manual "Use and Installation"

Depending on model and options the boiler comes with installed cooling fan(s).

	Range/Options	Default	Modbus ID
Fan enabled Enables the fan function for cooling the boiler's electronics.	0/1	1	40131
Start Temperature (°C) When the ambient temperature around the electronics in the boiler reaches the set value, the fan starts.	5 - 60 (1)	40	40232
Start fan when contactors are active When this option is selected, the fan starts at the same time as the first contactor for the power regulation is connected. The fan stops 60 seconds after the last contactor is disconnected.	0/1	1	40235
Pump Operating options: 0: Off Always off 1: Auto The output is activated when the boiler engages power. Turn off delay is 60 seconds. After 24h of inactivity the pump is automatically exercised for 60s. 2: Always On The output is activated when the control board is powered.	0: Off 1: Auto 2: Always On	0: Off	40241

Load Limiter

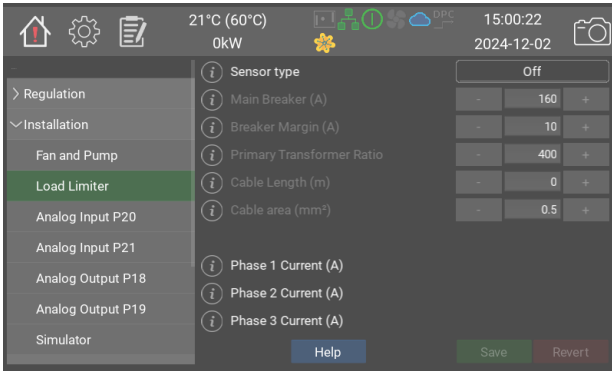

The load limiter protects the main fuses. The boiler continuously measures the current at the junction box and adjusts the output power so that the total current stays below a defined threshold.

Start by setting the main fuse size and desired margin. The boiler will attempt to keep the measured current below main fuse size minus the margin. In case a secondary transformer is used,

set the primary transformer transfer ratio.

Estimate and set the cable length from boiler to transformer, and set the cable cross section area.


For greater accuracy it is recommended to measure the actual running current and adjust the cable length value until the correct current value is shown.

Transformers for direct current measurement can be used with fuses up to 160A. For bigger fuses a set of secondary transformers has to be used. For more information on transformers and boiler models, please refer to technical manual "Use and Installation".

Please note that in order for the load limiter to work the transformers must measure all three incoming conductors.

	Range/Options	Default	Modbus ID
Sensor type Direct modes uses one set of transformers. Secondary mode uses primary transformers at the fuses and secondary to the boiler	0: Off 1: Direct 2: Secondary	0: Off	40221
Main Breaker (A)	1 - 1000 (1)	160	40222
Breaker Margin (A)	1 - 1000 (1)	10	40223
Primary Transformer Ratio Primary transformer ratio. Example: A stated ratio of 300:5 on the transformers gives 60.	1 - 1000 (1)	400	40224
Cable Length (m)	0 - 250 (1)	0	40225
Cable area (mm²)	0.5 - 15.0 (0.5)	0.5	40226 F
Phase 1 Current (A)			40227
Phase 2 Current (A)			40229
Phase 3 Current (A)			40230


Analog Input P20

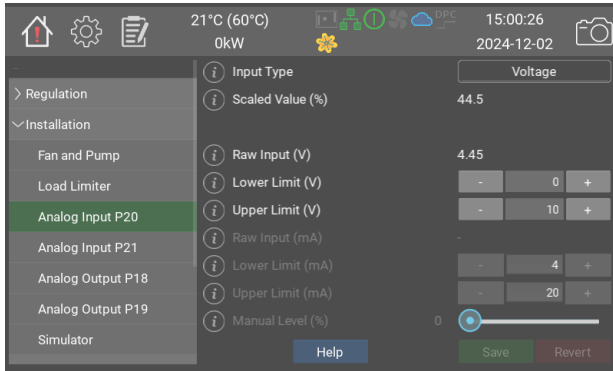

The analog inputs can be used to control set temperature, power limit, DPC power etc.

	Range/Options	Default	Modbus ID
Input Type	0: Off 1: Voltage 2: Current 3: Digital, NO 4: Digital, NC 5: Manual	0: Off	40251
Scaled Value (%)	0 - 100 (1)	0	40252
Raw Input (V)	0.0 - 12.0 (1.0)	0	40253 F
Lower Limit (V)	0.0 - 10.0 (0.1)	0	40254 F
Upper Limit (V)	0.0 - 10.0 (0.1)	10	40255 F
Raw Input (mA)	0.0 - 25.0 (1.0)	0	40256 F
Lower Limit (mA)	0.0 - 20.0 (0.1)	4	40257 F
Upper Limit (mA)	0.0 - 20.0 (0.1)	20	40258 F
Manual Level (%)	0 - 100 (1)	0	40259


Analog Input P21

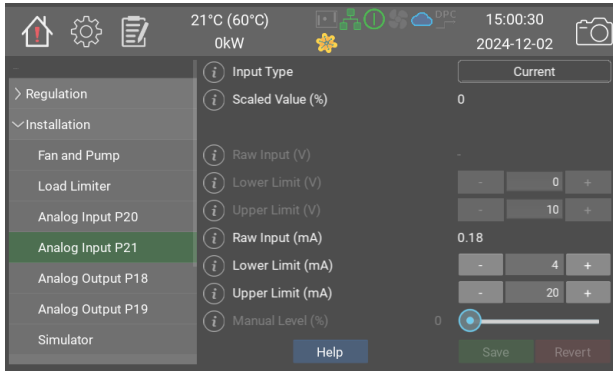

The analog inputs can be used to control set temperature, power limit, DPC power etc.

	Range/Options	Default	Modbus ID
Input Type	0: Off 1: Voltage 2: Current 3: Digital, NO 4: Digital, NC 5: Manual	0: Off	40261
Scaled Value (%)	0 - 100 (1)	0	40262
Raw Input (V)	0.0 - 12.0 (1.0)	0	40263 F
Lower Limit (V)	0.0 - 10.0 (0.1)	0	40264 F
Upper Limit (V)	0.0 - 10.0 (0.1)	10	40265 F
Raw Input (mA)	0.0 - 25.0 (1.0)	0	40266 F
Lower Limit (mA)	0.0 - 20.0 (0.1)	4	40267 F
Upper Limit (mA)	0.0 - 20.0 (0.1)	20	40268 F
Manual Level (%)	0 - 100 (1)	0	40269

Analog Output P18

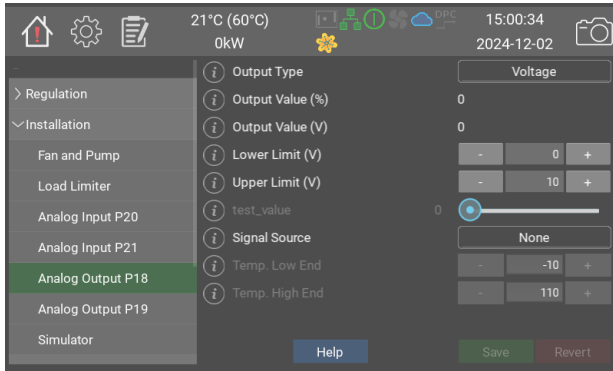

voltage, 0-10V, will be proportional to the selected value.


In **Active Power** mode the output voltage is proportional to the ratio of active power to installed power, as defined on the Installation page.

In **Boiler Temperature** the output voltage is proportional to the boiler temperature as compared to the min and max set values on the Regulation page.

The analog outputs can be used to read an internal process value. The output

	Range/Options	Default	Modbus ID
Output Type	0: Off 1: Voltage 2: Test	0: Off	40271
Output Value (%)	0 - 100 (1)	0	40272
Output Value (V)	0.0 - 10.0 (1.0)	0	40273 F
Lower Limit (V)	0.0 - 10.0 (0.1)	0	40274 F
Upper Limit (V)	0.0 - 10.0 (0.1)	10	40275 F
test_value	0 - 100 (1)	0	40276
Signal Source	0: None 1: Active Power 2: Boiler Temperature	0: None	40277
Temp. Low End	-10 - 100 (1)	-10	40278 S
Temp. High End	50 - 160 (1)	110	40279 S

Analog Output P19

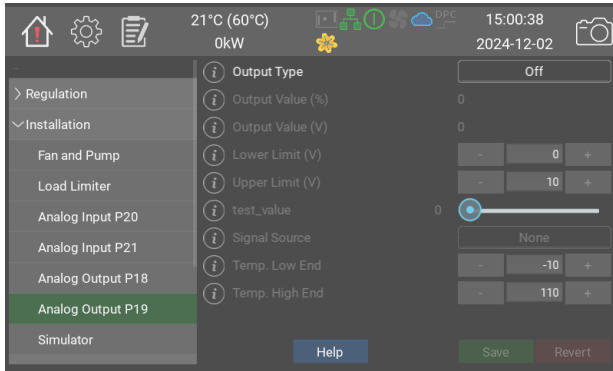

voltage, 0-10V, will be proportional to the selected value.


In **Active Power** mode the output voltage is proportional to the ratio of active power to installed power, as defined on the Installation page.

In **Boiler Temperature** the output voltage is proportional to the boiler temperature as compared to the min and max set values on the Regulation page.

The analog outputs can be used to read an internal process value. The output

	Range/ Options	Default	Modbus ID
Output Type	0: Off 1: Voltage 2: Test	0: Off	40281
Output Value (%)	0 - 100 (1)	0	40282
Output Value (V)	0.0 - 10.0 (1.0)	0	40283 F
Lower Limit (V)	0.0 - 10.0 (0.1)	0	40284 F
Upper Limit (V)	0.0 - 10.0 (0.1)	10	40285 F
test_value	0 - 100 (1)	0	40286
Signal Source	0: None 1: Active Power 2: Boiler Temperature	0: None	40287
Temp. Low End	-10 - 100 (1)	-10	40288 S
Temp. High End	50 - 160 (1)	110	40289 S

Simulator

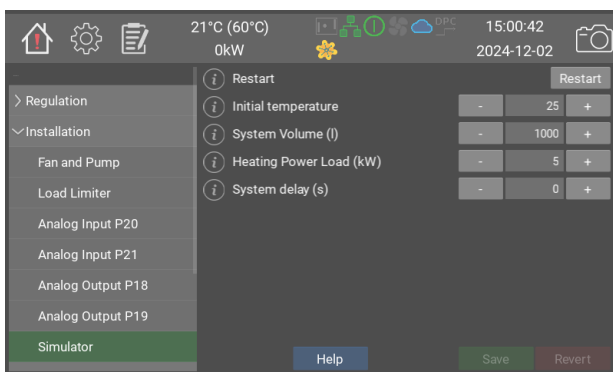


The simulator can be used for demoing and is useful for testing input and output signals before deploying the boiler.

It is a simple physics model of a tank of water. Power is applied to heat it at the same time as a fixed amount of heat is subtracted.

	Range/ Options	Default	Modbus ID
Restart			40211
Initial temperature	1 - 100 (1)	25	40212
System Volume (l)	1 - 15000 (1)	1000	40213
Heating Power Load (kW)	0 - 1500 (1)	5	40214
System delay (s)	0 - 900 (1)	0	40215


Energy and Current

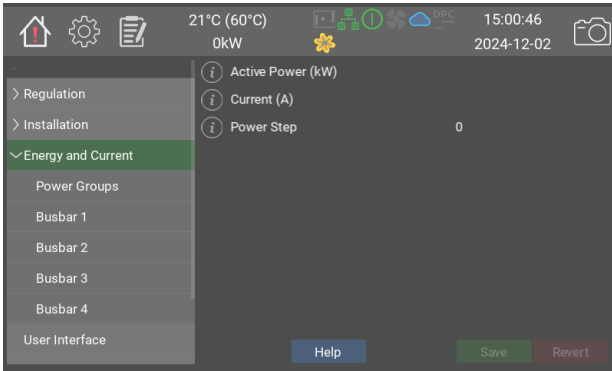

None

	Range/ Options	Default	Modbus ID
Active Power (kW)			40401
Current (A)			40402
Power Step			40403


Power Groups

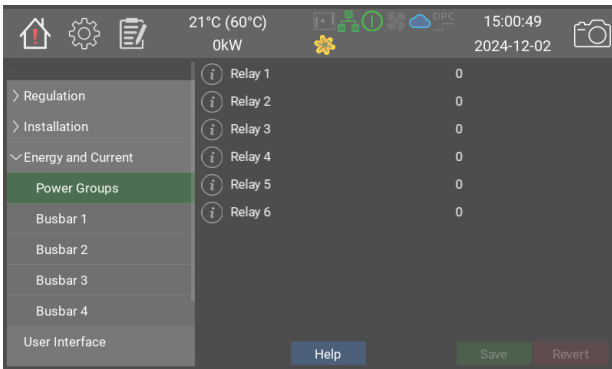

This page shows the number of times the relays controlling the power groups have operated.

	Range/ Options	Default	Modbus ID
Relay 1			40411
Relay 2			40412
Relay 3			40413
Relay 4			40414
Relay 5			40415
Relay 6			40416

Busbar 1

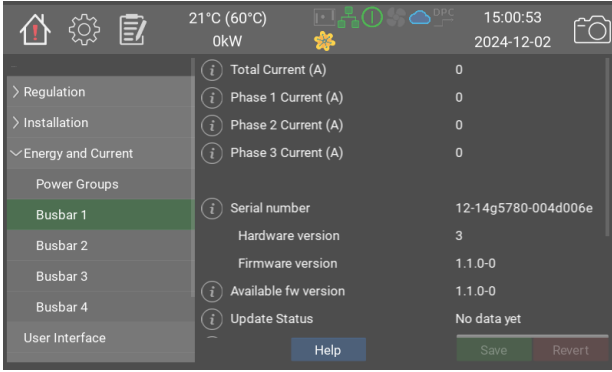

Each busbar has a current measurement board. This board measures the current on the three phases and any imbalance

between them.


The boiler calculates the total power used by using the measured current and resistance of the heaters. This is presented on the page Energy and Current

The imbalance is used to detect increased leakage to earth and avoid breaking of the immersion heaters.

The current boards are automatically updates to the latest version when new boiler control software is loaded.

	Range/ Options	Default	Modbus ID
Total Current (A) Total current of this busbar, in Amperes			40421
Phase 1 Current (A)			40422
Phase 2 Current (A)			40423
Phase 3 Current (A)			40424
Serial number This number is unique from the factory			
Hardware version			
Firmware version			
Available fw version This is the latest available software version.			
Update Status This field show the status of software update. Please note that the same information is shown on all board's pages even though only one is updated at a time.			
Load Hex File to Board			
Board Enabled	0/1	0	40426
Identify Board	0/1	0	
Test protocol version			

Busbar 2

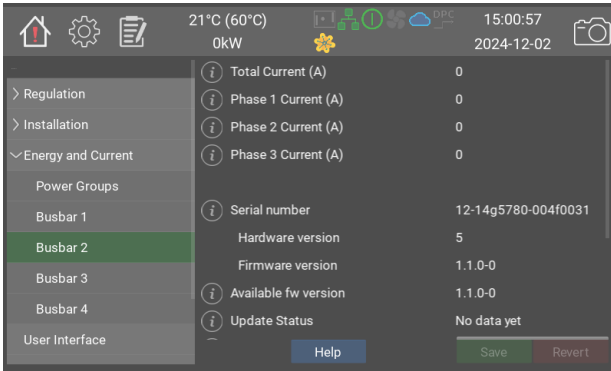

Each busbar has a current measurement board. This board measures the current on the three phases and any imbalance

between them.


The boiler calculates the total power used by using the measured current and resistance of the heaters. This is presented on the page Energy and Current

The imbalance is used to detect increased leakage to earth and avoid breaking of the immersion heaters.

The current boards are automatically updates to the latest version when new boiler control software is loaded.

	Range/ Options	Default	Modbus ID
Total Current (A) Total current of this busbar, in Amperes			40431
Phase 1 Current (A)			40432
Phase 2 Current (A)			40433
Phase 3 Current (A)			40434
Serial number This number is unique from the factory			
Hardware version			
Firmware version			
Available fw version This is the latest available software version.			
Update Status This field show the status of software update. Please note that the same information is shown on all board's pages even though only one is updated at a time.			
Load Hex File to Board			
Board Enabled	0/1	0	40436
Identify Board	0/1	0	
Test protocol version			

Busbar 3

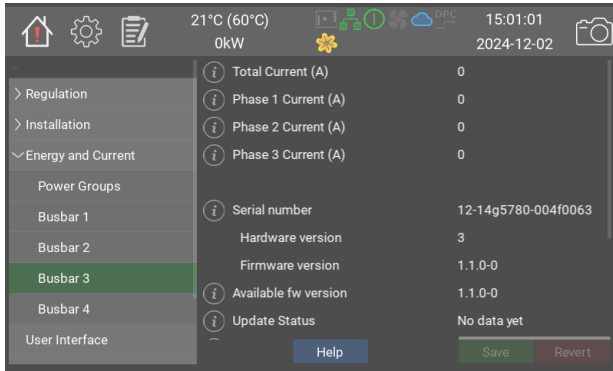

Each busbar has a current measurement board. This board measures the current on the three phases and any imbalance

between them.


The boiler calculates the total power used by using the measured current and resistance of the heaters. This is presented on the page Energy and Current

The imbalance is used to detect increased leakage to earth and avoid breaking of the immersion heaters.

The current boards are automatically updates to the latest version when new boiler control software is loaded.

	Range/ Options	Default	Modbus ID
Total Current (A) Total current of this busbar, in Amperes			40441
Phase 1 Current (A)			40442
Phase 2 Current (A)			40443
Phase 3 Current (A)			40444
Serial number This number is unique from the factory			
Hardware version			
Firmware version			
Available fw version This is the latest available software version.			
Update Status This field show the status of software update. Please note that the same information is shown on all board's pages even though only one is updated at a time.			
Load Hex File to Board			
Board Enabled	0/1	0	40446
Identify Board	0/1	0	
Test protocol version			

Busbar 4

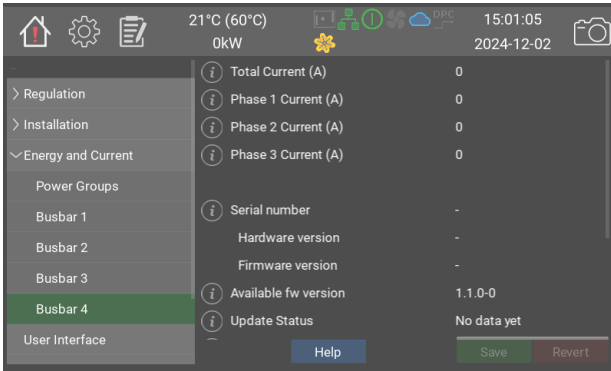

Each busbar has a current measurement board. This board measures the current on the three phases and any imbalance

between them.


The boiler calculates the total power used by using the measured current and resistance of the heaters. This is presented on the page Energy and Current

The imbalance is used to detect increased leakage to earth and avoid breaking of the immersion heaters.

The current boards are automatically updates to the latest version when new boiler control software is loaded.

	Range/ Options	Default	Modbus ID
Total Current (A) Total current of this busbar, in Amperes			40451
Phase 1 Current (A)			40452
Phase 2 Current (A)			40453
Phase 3 Current (A)			40454
Serial number This number is unique from the factory			
Hardware version			
Firmware version			
Available fw version This is the latest available software version.			
Update Status This field show the status of software update. Please note that the same information is shown on all board's pages even though only one is updated at a time.			
Load Hex File to Board			
Board Enabled	0/1	0	40456
Identify Board	0/1	0	
Test protocol version			

User Interface

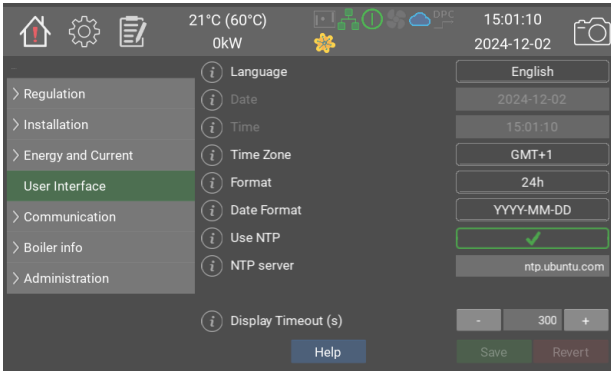


Time and language settings.

The boiler comes preconfigured for use with NTP, a timeserver. If the boiler has a working internet connection it will automatically fetch the correct time from the specified server.

i Please note that the boiler does not automatically switch between standard and daylight saving time.

	Range/ Options	Default	Modbus ID
Language	0: English 1: Svenska	1: Svenska	
Date			
Time			
Time Zone	0: GMT-14 1: GMT-13 2: GMT-12 3: GMT-11 4: GMT-10 5: GMT-8 6: GMT-7 7: GMT-6 8: GMT-5 9: GMT-4 10: GMT-3 11: GMT-2 12: GMT-1 13: GMT 14: GMT+1 15: GMT+2 16: GMT+3 17: GMT+4 18: GMT+5 19: GMT+6 20: GMT+7 21: GMT+8 22: GMT+9 23: GMT+10 24: GMT+11 25: GMT+12 26: GMT+13 27: GMT+14	14: GMT+1	
Format	0: 12h 1: 24h	1: 24h	
Date Format	0: YYYY-MM-DD 1: MM/DD/YY	0: YYYY-MM-DD	
Use NTP Network Time Protocol Enable to automatically synchronize the clock will with the selected time server	0/1	1	
NTP server A valid URI to the NTP server.		ntp.ubuntu.com	
Display Timeout (s) After this long time of inactivity the system goes back to the main page and the display dims. Active warnings and errors will cause the backlight to blink.	30 - 7200 (1)	300	

Communication

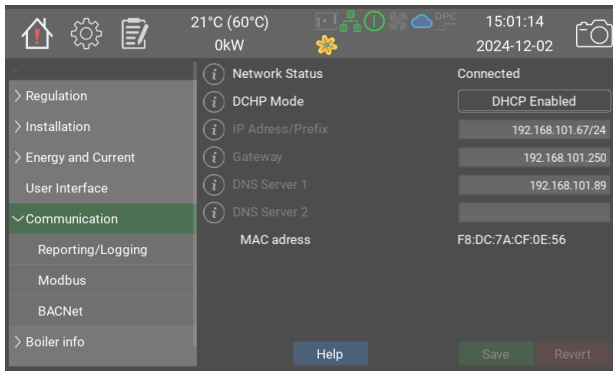


Network configuration.

i Please note that IP-adresser are written as adress/prefix. Netmask 255.255.255.0 is equivalent to prefix 24

	Range/ Options	Default	Modbus ID
Network Status	0: Connected 1: Connected, No IP adress 2: No Connection 3: Unknown 4: Disconnected		40501
DCHP Mode	0: DHCP Enabled 1: Manual Configuration	0: DHCP Enabled	40502
IP Adress/Prefix The ethernet IP address should be in the following format: aaa.bbb.ccc.ddd/pp where pp is the prefix, usually 24		192.168.1.2/24	
Gateway		192.168.1.2	
DNS Server 1		192.168.1.2	
DNS Server 2		192.168.1.2	
MAC adress			

Reporting/Logging

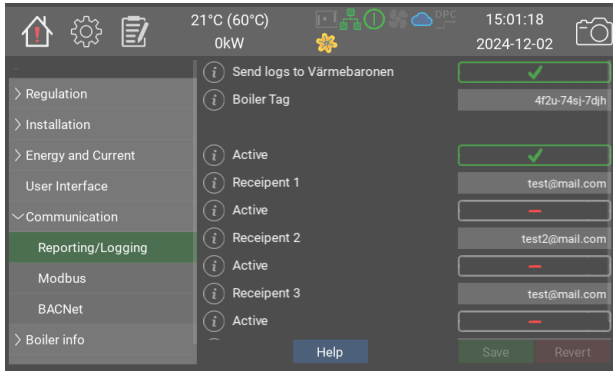

If the boiler has a working internet connection, it can periodically send log and system data to Värmebaronen.


This allows Värmebaronen to improve the performance and functions of the boiler and helps the service department solve issues faster.

The connection is secured with SSL, like all modern web pages, and does not allow external control of the boiler.

This is required in order to send alarms to email. Up to four email recipients can be added

	Range/ Options	Default	Modbus ID
Send logs to Värmebaronen Enable this option to periodically send logs to Värmebaronen.	0/1	0	
Boiler Tag This will be used in alarm mails			
Active	0/1	0	
Receipt 1		email@test.com	
Active	0/1	0	
Receipt 2		email@test.com	
Active	0/1	0	
Receipt 3		email@test.com	
Active	0/1	0	
Receipt 4		email@test.com	

Modbus

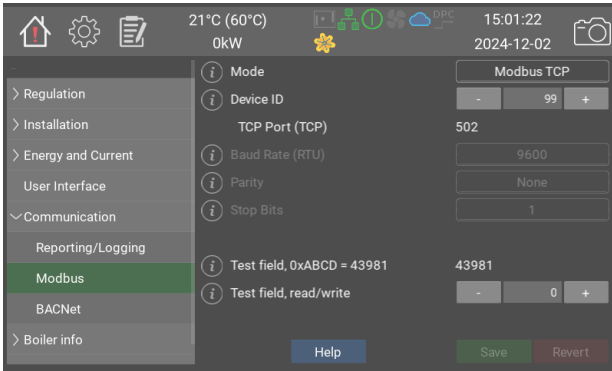

The optional modbus module allows controlling and monitoring parameters via RS485 or ethernet.

The boiler uses a prefix of 40001, which means that index 40002 in the manual is internally index 1.

For a good and deeper read on calculating indices see <https://www.teracomsystems.com/blog/demystifying-modbus-rtu-addressing/>

F Decimal numbers are written and read with a factor of 10. Ex. 46.7°C reads as 467

S Negative numbers are indicated by bit

15, 0x8000, and are calculate as follows:
 -31 is $65536 + (-31) = 65505$
 -14.5 is $65536 + (-145) = 65391$
 Reading a value of 65372 means -164 or -16.4, depending on data type.

A disconnected sensors shows as "-" on the display. This is read as 0x8000 or 32768 via modbus.


The computer program **mbpoll** is recommend for testing. To read the boiler temperature (index 40002) via TCP from server 99 the following command can be used:

```
> mbpoll -a 99 -r 1 192.168.101.67
Example responses:
-- Polling slave 99... Ctrl-C to stop)
1: 65199 (-337)
-- Polling slave 99... Ctrl-C to stop)
1: 87
-- Polling slave 99... Ctrl-C to stop)
1: 65527 (-9)
```

Modbus poll is not recommended since it seems to do index conversion backwards.

	Range/Options	Default	Modbus ID
Mode Select communication medium: Modbus RTU uses RS485 on connector P22 . Modbus TCP uses ethernet on connector P26	0: Off 1: Modbus RTU 2: Modbus TCP	0: Off	
Device ID	1 - 254 (1)	99	
TCP Port (TCP)			
Baud Rate (RTU)	0: 9600 1: 19200 2: 38400 3: 57600 4: 115200	9600	
Parity	0: None 1: Even 2: Odd	0: None	
Stop Bits	0: 1 1: 2	1	
Test field, 0xABCD = 43981		43981	40511
Test field, read/write	0 - 65535 (1)	0	40512


BACNet

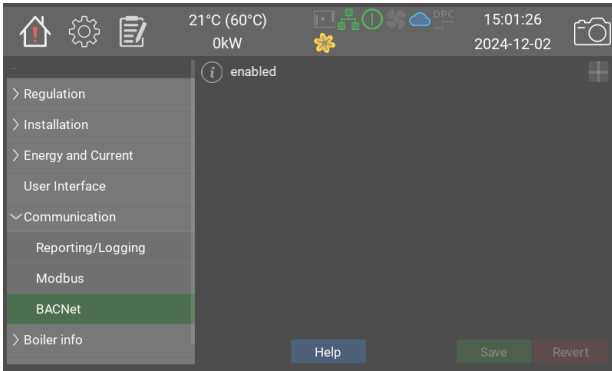

The optional BACNet module allows controlling and monitoring parameters via a network connection.

	Range/ Options	Default	Modbus ID
enabled	0/1	0	

Boiler info

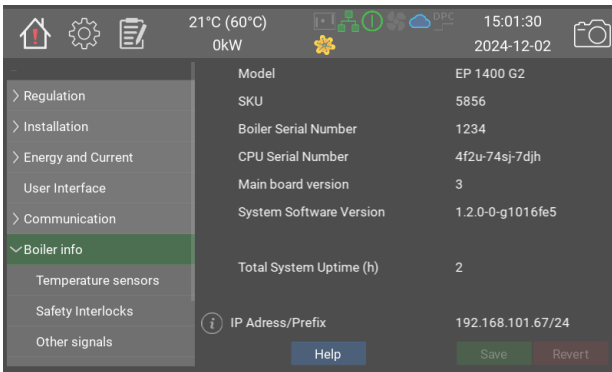

Information about the boiler.

Boiler model, serial number system software version etc.

	Range/ Options	Default	Modbus ID
Model			
SKU			
Boiler Serial Number			
CPU Serial Number			
Main board version			
System Software Version			
Total System Uptime (h)			
IP Address/Prefix The ethernet IP address should be in the following format: aaa.bbb.ccc.ddd/pp where pp is the prefix, usually 24			

Temperature sensors



This page shows current values for all connected temperature sensors.

	Range/ Options	Default	Modbus ID
P10, Boiler	-40.0 - 200.0 (1.0)		40002 FS
P11, Ambient	-40.0 - 200.0 (1.0)		40003 FS
P12, Secondary	-40.0 - 200.0 (1.0)		40004 FS
P13, UTK	-40.0 - 200.0 (1.0)		40005 FS
P14, Boiler HT	-40.0 - 200.0 (1.0)		40006 FS
P15, Secondary HT	-40.0 - 200.0 (1.0)		40007 FS
P36, PT100	-40.0 - 200.0 (1.0)		40008 FS
P37, PT100	-40.0 - 200.0 (1.0)		40009 FS
P38, NTC	-40.0 - 200.0 (1.0)		40010 FS
P39, NTC	-40.0 - 200.0 (1.0)		40011 FS
PCB, Interior	-40.0 - 200.0 (1.0)		40012 FS
Relative Humidity, %	0 - 100 (1)		40013


Safety Interlocks



Status of the safety related inputs. P4 and P5 also have LEDs on the main board

	Range/Options	Default	Modbus ID
P17. Water Level OK	0/1	0	40021
P4:2. Reserved	0/1	0	40022
P4:3. Overtemp OK	0/1	0	40023
P4:4. Pressure sensor. high OK	0/1	0	40024
P5:2. Main breakers closed	0/1	0	40025
P5:3. Pressure sensor. low OK	0/1	0	40026
P5:4. Reserved	0/1	0	40027


Other signals

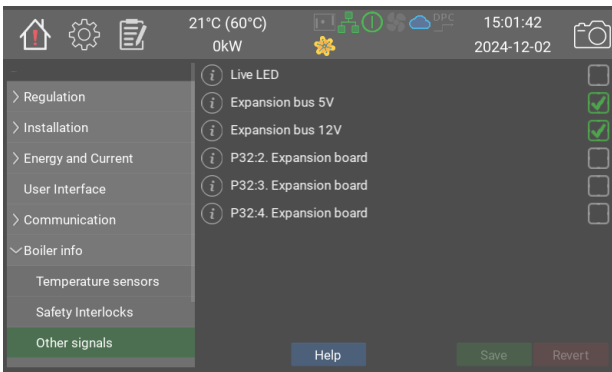

Status of other inputs and outputs on the main board, and on the expansion board

	Range/Options	Default	Modbus ID
Live LED	0/1	0	
Expansion bus 5V	0/1	0	40031
Expansion bus 12V	0/1	0	40032
P32:2. Expansion board	0/1	0	40028
P32:3. Expansion board	0/1	0	40029
P32:4. Expansion board	0/1	0	40030


Software Versions

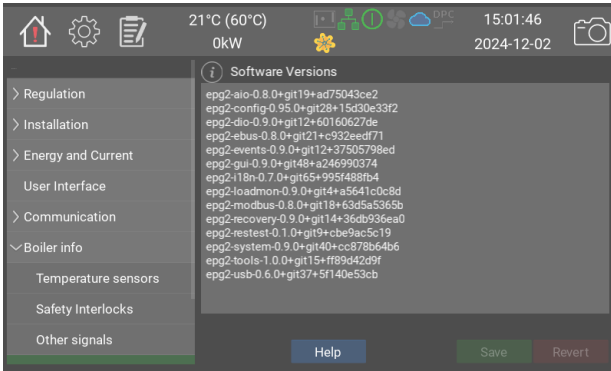

List of internal software modules and their versions

	Range/ Options	Default	Modbus ID
Software Versions			

Load Monitor

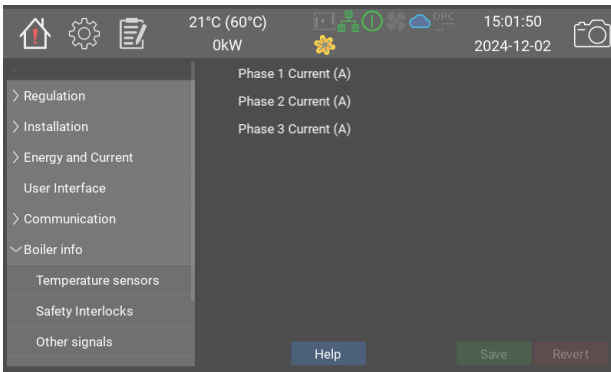


This page shows the actual current/ phase at the fuses the load limiter protects. For correct display, it is required that all settings regarding the load monitor are correctly performed and adjusted.

For setting the load monitor, see the section load monitor in the manual EP G2 Menus and Control System.

	Range/ Options	Default	Modbus ID
Phase 1 Current (A)			
Phase 2 Current (A)			
Phase 3 Current (A)			

Administration

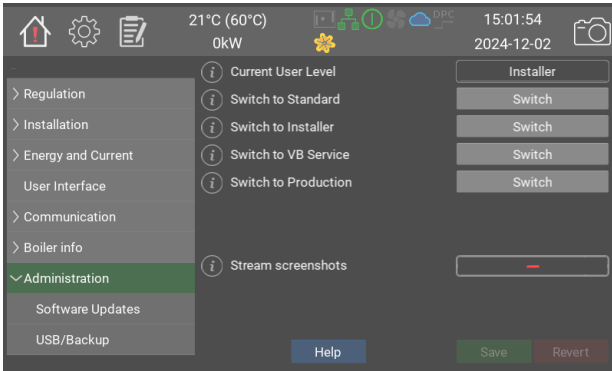


Select user access level:
 Standard user can view most settings.
 Installer can view and change most parameters.

Stream screenshots allows the boiler to send screenshots to Värmebaronen to aid in service and installation.

	Range/ Options	Default	Modbus ID
Current User Level	0: User 1: Installer 2: VB Service 3: VB Production	0	
Switch to Standard			
Switch to Installer			
Switch to VB Service			
Switch to Production			
Stream screenshots When enabled, this will allow the boiler to send a live stream of screenshots to Värmebaronen Service to help installation and troubleshooting. The streaming automatically turns off 20min after the display dims. This requires a working internet connection.	0/1	0	

Software Updates

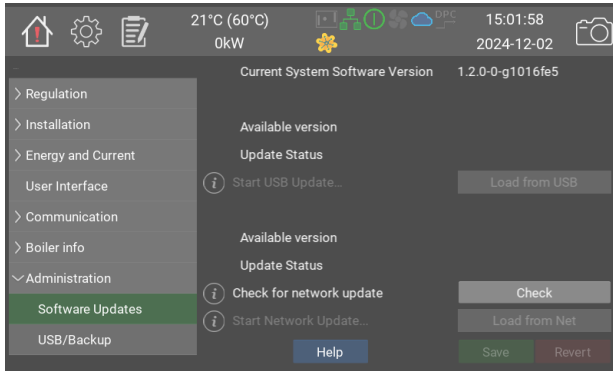

The currently running version is shown on top of the page.

Next is the version available on USB, if any.


Last is the version available from the server. The boiler periodically checks for updates, but will also check when Check is pressed.

The boiler can be updated either from a USB memory or, if connected to the internet, directly from Värmebaronen's software server.

Only versions newer than the current one are shown.

	Range/ Options	Default	Modbus ID
Current System Software Version			
Available version			
Update Status			
Start USB Update...			
Available version			
Update Status			
Check for network update			
Start Network Update...			

USB/Backup

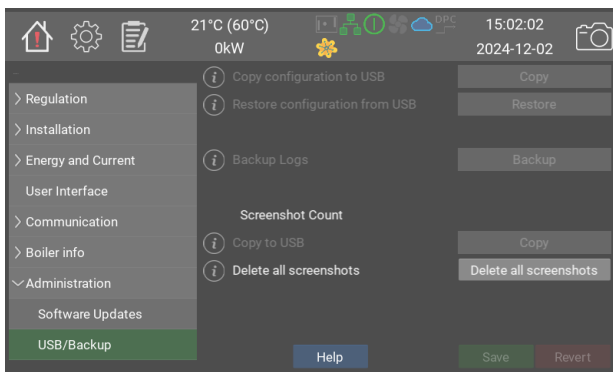

When a USB-memory is present configuration, logs and screendumps can be copied for backup and troubleshooting.

	Range/ Options	Default	Modbus ID
Copy configuration to USB			
Restore configuration from USB			
Backup Logs			
Screenshot Count			
Copy to USB			
Delete all screenshots			



Värmebaronen AB
Arkelstorpsvägen 88
291 94 Kristianstad
Tel +46 44 22 63 20
www.varmebaronen.se
info@varmebaronen.se

Software updates:
telemetry.varmebaronen.se:2002